


AI-WIRELESS ROBOTIC POOL CLEANER USER MANUAL

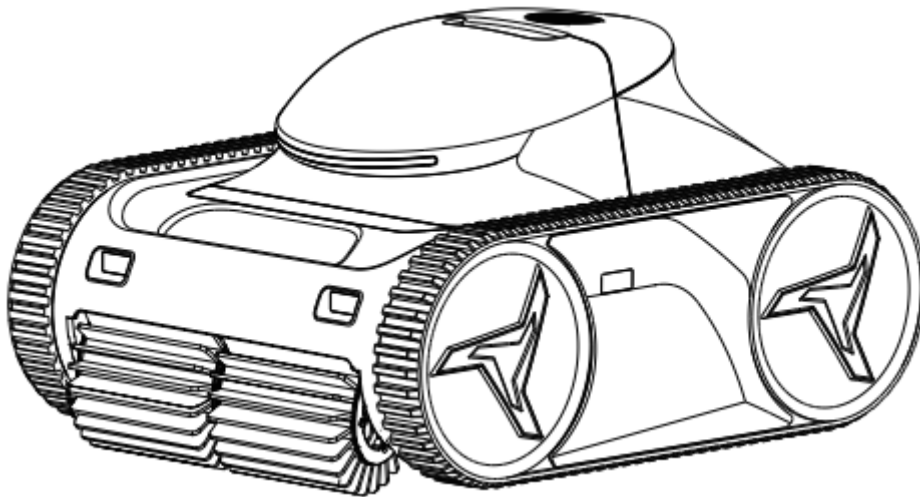

X30/45/60/80


THANK YOU FOR PURCHASING X30/45/60/80 AI-WIRELESS ROBOTIC POOL CLEANER

Please read the manual carefully before
using or operating the robot cleaner
Keep for reference and subsequent use.

★ ★ TIPS ★ ★


How to achieve the most efficient cleaning

It is recommended to place the robot at the pool corner, which will facilitate quick coverage of the entire pool floor area.

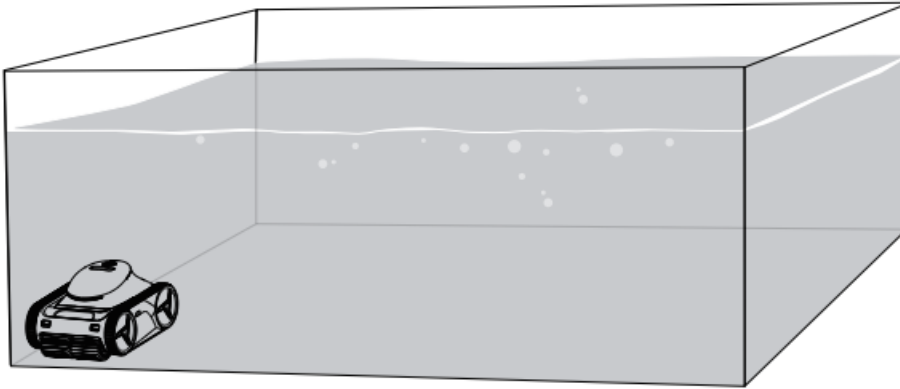

How to let the water drain out while removing robot from the pool

Place the robot on the edge of the pool for a while and let the water drain out.

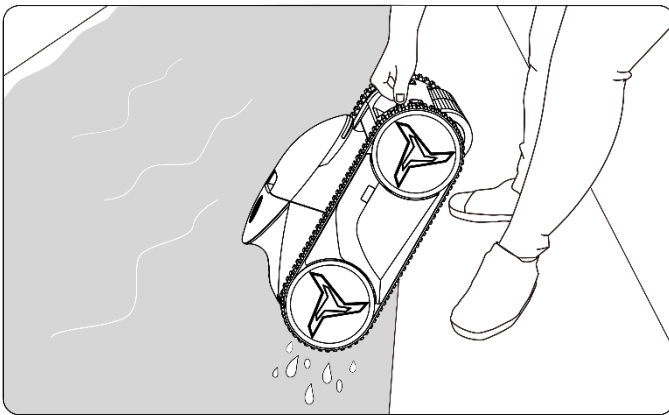

⚠ For battery protection, it is recommended that the robot should be fully charged every 3 months and magnetic cap should be inserted back if the robot not be used for more than 14 days.

WARNINGS

Information contained in this warnings page will help you operate the robot safely, protect yourself and others from hazards, and prevent damage to the robot and other property.

GENERAL WARNINGS

- The robot is designed for pool cleaning; do not use it for other purposes.
- Read the instructions before operating the robot.
- Keep the robot out of the reach of children or persons with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children should not play with the robot.
- The robot must be maintained by dealer except for simple routine maintenance written in this manual.
- Installers must follow manufacturer's instruction and keep in compliance with national or local standards for installation. Under no circumstances will the manufacturer be held responsible for any outcome incurred by failure to comply with applicable standards or local regulations.
- Incorrect installation or use of the robot may cause serious damage to property or injuries to people.
- Do not enter pool while the robot is in water.

WARNINGS ON USE

- For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance, and operated this power supply at least 3.5 meters from the edge of the pool.
- Disconnect the robot from the power supply and insert back the magnetic cap before any maintenance on the robot.
- Do not operate the robots with wet hands.
- Disconnect the robot from the supply mains before carrying out user maintenance such as cleaning the filter.
- Do not try to repair the robot yourself or open engine box in case of malfunction, please contact your dealer.
- If there is any malfunction or release of odor from the robot when charging, disconnect it from the power supply immediately and contact your dealer.
- Use only original replacement parts supplied by the manufacturer for service and repair.

SPECIAL CONDITIONS APPLICABLE TO ROBOT

- The robot is intended for swimming pools with a depth less than 3 meters and a water temperature between 0°C ~ 35°C. (Below 15°C the endurance time may be affected)
- The robot will automatically stop running if the water depth is less than 40 centimeters for the purpose of motor protection.
- Do not use the robot during shock chlorination.
- Do not use the robot in thunder storm or stormy weather.
- Do not expose the robot to direct rainfall or sunlight for an extended period.
- Optimum storage temperature between -20-60°C and storage humidity between 35%-85%/RH.

CAUTIONS

- Rest/hold the robot by the pool edge for water to drain out before lifting the robot out of water, do it slowly so as to prevent back injury.
- Clean the filter basket after each cleaning cycle.
- Do not lift the robot out of water by track.

REMINDER

- When the robot battery is below 30%, it will clean the floor of the pool only.


Table of Contents

SECTION 1. PRODUCT OVERVIEWS	5
1.1 Packaging content	5
1.2 Technical specification	6
1.3 Preparation	7
SECTION 2. OPERATION	8
2.1 Button and display introduction	9
2.2 Operating robot and robot functions	10
2.3 Emptying the filter basket	11
2.4 Charging the robot.....	11
2.5 WIFI matching for the robot.....	12
SECTION 3. MAINTENANCE.....	13
3.1 Filter maintenance	13
3.2 Impeller maintenance.....	13
3.3 Replacing the worn brushes	14
3.4 Replacing the worn tracks	15
SECTION 4. TROUBLE SHOOTING	16


SECTION 1. PRODUCT OVERVIEWS

1.1 Packaging content

The following items are included in the packaging of robot. Please contact your dealer if any damage or loss.

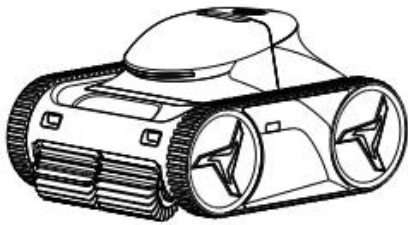


①

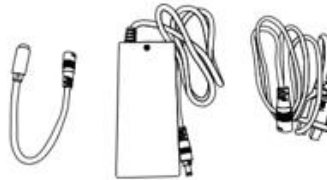


②



③

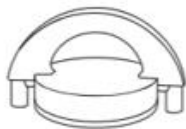

④

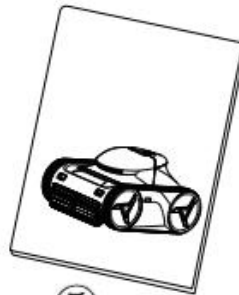

⑤

① The robot ② Charger ③ Hook ④ Magnetic cap*2 ⑤ User manual

Note:

1. Remove the Magnetic cap ④ when using or charging. Insert Magnetic cap to machine's bottom for battery protection when not using the robot for more than 14 days.
2. If software exception happens, insert Magnetic cap to machine's bottom for 2 seconds, then remove it to restart.

1.2 Technical specification


Model	X80	X60	X45	X30
Suggested pool size	30~70 m ²	20~50 m ²	15~40 m ²	15~30 m ²
Performance condition reference*: Floor mode				
Endurance time	8h	6h	4.5h	3h
Performance condition reference*: Floor/wall/waterline mode				
Endurance time	4.5h	3.5h	2.5h	2h
Charging time	5h	4h	3h	2h
Battery	14Ah (352wh)	10.4Ah (262wh)	7.8Ah (196wh)	5.2Ah (131wh)
Optimum pool temperature	0~35°C			
Cleaning mode	Floor/Floor&Wall&Waterline			
Multiple cycle length option	0.5h/1h/2h			
Clean cycle mode	YES			
App application	YES			
Filter capacity	3.2L			
Filtration accuracy	180µm(80mesh)			
Pump flow rate	22~10m ³ /h	20~10m ³ /h		
Running power	30-110W			
Moving speed	12m/min			
Number of motors	3			
Charger input	90-265VAC ~ 50/60Hz			
Charger output	25.2V/1.2A			
Charger power	72.5W			
Robot NW/GW	11.5 / 15.7kg	11.4 / 15.6kg	10.9 / 15.1kg	10.4 / 14.6kg
Robot dimension (L*W*H)	495*395*265 mm			
Robot packaging dimension (L*W*H)	580*448*330 mm			

* Reference: Above working time is based on 2 hours' cleaning each time at floor mode in the liner pool.


Note: The manufacturer reserves the right to modify these specifications without notice.

1.3 Preparation

① Remove the Magnetic cap from the bottom of the robot and store in a safe place (required for winterization and unit reset).

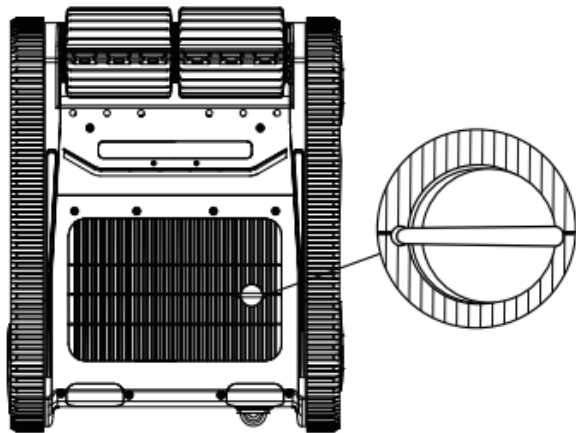

② Remove the plug cover. Fully charge the unit, the plug must be replaced after charging.

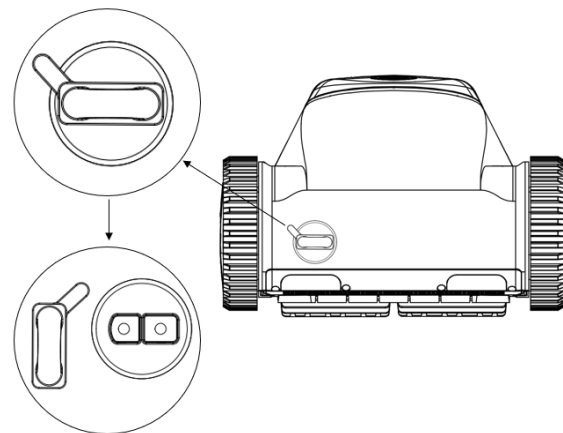


③ Plug charger into mains supply.


The red light indicates :charging.

The green light indicates the robot is: fully charged.

Please fully charge the robot before the first use.

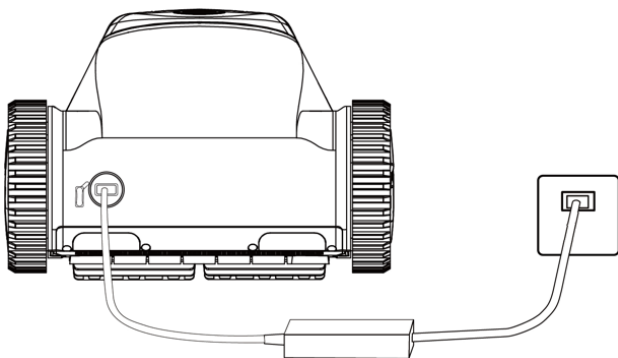

④ Installing the removal hook to a vac or brush pole
(Pole not included).

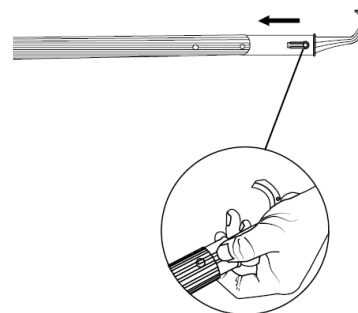

SECTION 2. OPERATION


⚠ CAUTION

To prevent possible damage to the robot or people, be sure to follow these guidelines:


- After cleaning is completed, store the robot in a cool dry place away from direct sunlight.
- The robot becomes heavier when filled with water. Pay special attention when lifting it out of the water, lift slowly allowing all water and residue to drain before lifting clear of the pool. Do not stretch or over exert yourself



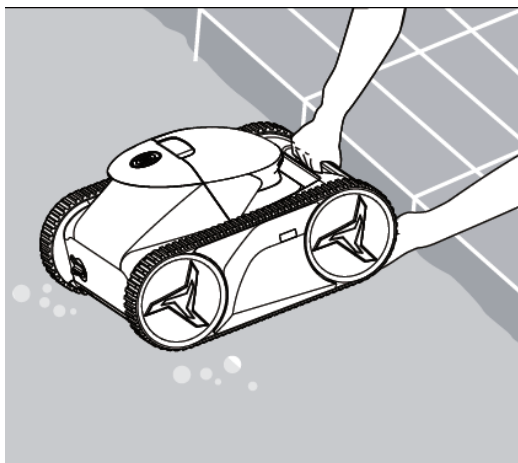


IMPORTANT

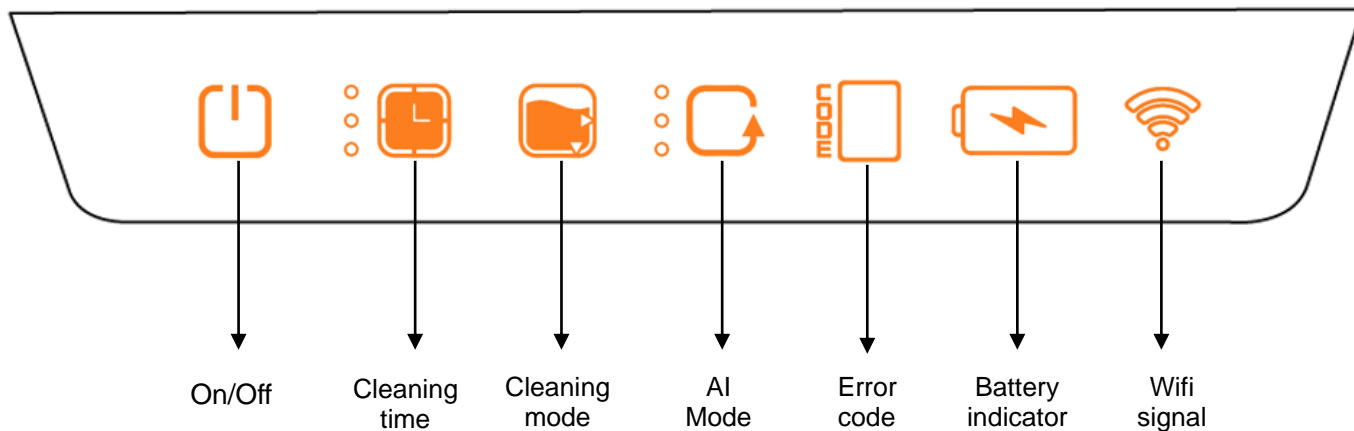

- Please place the robot into the pool water within 3 minutes of setup, or the robot will enter sleep mode and the procedure may need repeating.
- Thoroughly clean the filter basket after cleaning cycle, please avoid cleaning the surface of the filter box directly with your hands. Always flush with water
- The robot has a safety feature that automatically stops the unit if a cycle starts out of the water.
- When placing the robot in the water move the robot slightly in all directions so no trapped air is contained in the robot, allowing the unit to submerge effectively. (As showed in the pic below)



2.1 Introduction of button








Type of button	Icon	Display Status	Description
Power switch		Green light flashes	Setup status
		Green light on	Running status/Inspection status under water
Cleaning time duration		1 green light on	Cleaning time: 0.5H
		2 green lights on	Cleaning time: 1.0H
		3 green lights on	Cleaning time: 2.0H*
		All lights off	Clean until low battery
Cleaning option		Triangle green light in the floor being on	Floor cleaning mode
		Both Triangle green lights being on	Overall cleaning mode (Floor, wall, waterline)
Clean cycle Mode		1 green light on	cycle every 24 hours
		2 green lights on	cycle every 48 hours
		3 green lights on	cycle every 72 hours
		All lights off	Single clean cycle only
Error code		1	Left drive fault
		2	Right drive fault
		3	water pump fault
		4	Control panel communication fault

		5	Infrared sensor fault
		6	Abnormal water sensor
Battery light (charge disconnected)		1 green light on	Battery level: 20-50%
		2 green lights on	Battery level: 50-75%
		3 green lights on	Battery level: 75-100%
Low battery		1 red light flashing	Battery level: 15-20%
Battery light (charging)		1 green light flashing	Battery level: 0-50%
		1 green light on, 1 green light flashing	Battery level: 50-75%
	2 green lights on, 1 green light flashing	Battery level: 75-100%	
	3 green lights on	Battery level: 100%	
Signal light		Green light flashes	Wifi unmatched
		Green light on	Wifi network matched
		Red light flashes	No Wifi Connection


*Note: If the cleaning time is set to be more than 2 hours via App, there will also be 3 lights on.


2.2 Operation the unit


1. Hold  for 3 seconds to activate the device, until  flashes, then begin the robot setup (see section 2.1). After setup, press  once again to confirm your setup settings. Then place the robot into the water, the robot will start its cleaning cycle automatically once it reaches the swimming pool floor. If the robot hasn't started its cleaning cycle automatically within 3 minutes and the  is flashing, Remove the robot from the water and repeat the setup again.

*Note: There are 2 different ways to preset you cleaning cycle mode: 

(for example setting up a 24hr cycle you have two options of when to set **your first pool clean** either immediately of the first cycle by delay by 24hrs, in either case the unit will then repeat a clean cycle every 24hrs until low battery is met)


a. If press  once and then put the robot into the water, the robot will start work immediately. After one cleaning cycle, the robot will enter sleeping mode and automatically wake up and work after 24 hours.

b. If press  for 3s and then put the robot into the water, the robot will enter sleeping mode. Then after 24 hours, it will start cleaning automatically.

2. If the battery is less than 20% during its cleaning,  will keep flashing 1 red light, the robot will automatically go to the nearby poolside and shut down, then enter into sleep mode after 5 minutes.


2.3 Cleaning filter basket

When cleaning is done, the robot will stop by the wall of pool. Please use the hook to catch the handle and lift the robot out of the water, then clean the filter basket as below operation:

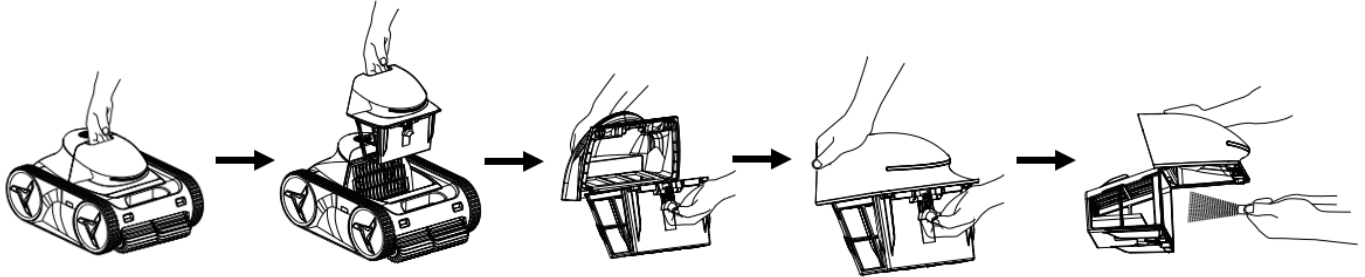


Note:

There is a risk of being scratched by surface debris when cleaning the filter basket with your hands, it is recommended to wear rubber gloves for protection.

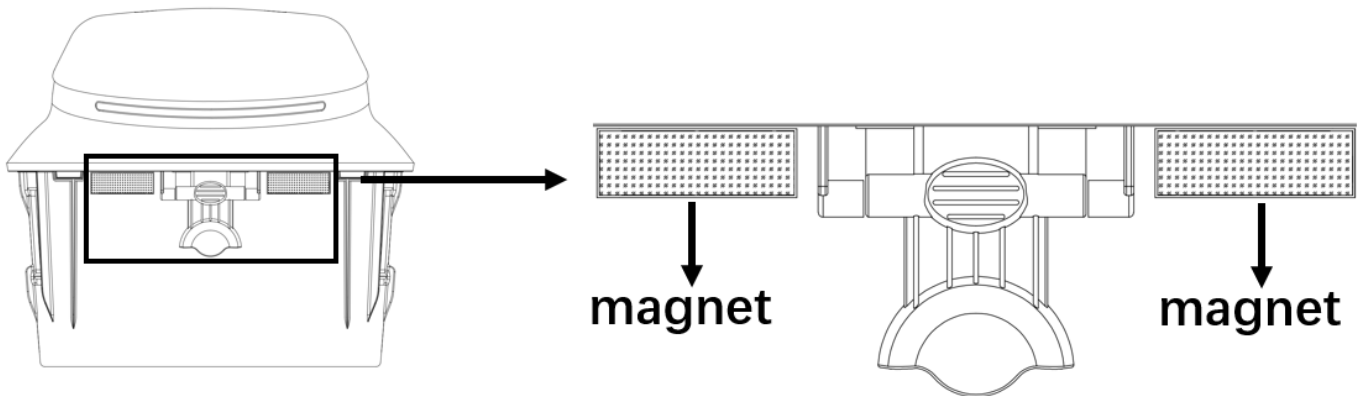

2.4 Charging the robot

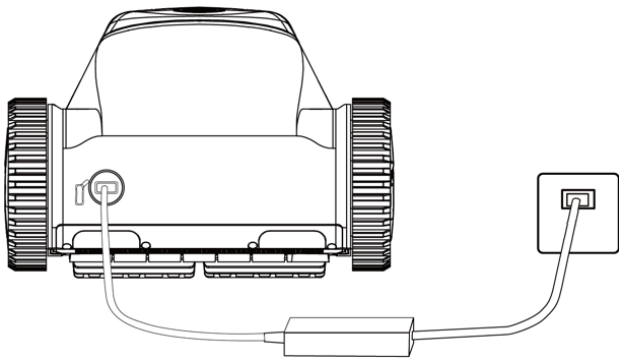




1. Plug the adapter into power supply and make sure that indicator light is red.
2. Open the cover of the robot's plug to expose the plug charging port.
3. Before charging, make sure the charging port is dry.
4. Align the adapter plug with the robot socket. When the robot is charging, the battery light of the robot will flash

green and the indicator light of the adapter will be red.

5. If the battery bar indicator is full when 3 green lights are on, and the indicator light of the power adapter will also turn green, then the robot is fully charged.
6. Disconnect the charger after charging is completed to protect the battery life.
7. If the robot needs to be stored for long time, it should be fully charged at least every three months to protect the battery.

Note: Only ever charge with the original charging adapter.

1.5 WIFI setup

Hold  for 3s, until you hear a beep, the robot enters wifi setup mode and  will start flashing, open the “AI-BOT” APP to search device to search and match the robot to your network and go matching, the robot will beep three times and  will turn green after network is matched.

Setup of the robot can now be carried out via the APP using Wifi or Bluetooth.

Setup of the robot cannot be operated by APP if the robot is in the pool. (Due to the physical limitation of radio signal penetration in water).

Note: download the “AI-BOT” APP in iOS App Store/ Google Play Store.



SECTION 3. MAINTENANCE

⚠ WARNING

1. To avoid electric shock and other hazards which could result in major injuries, disconnect the adapter from the power source before performing any cleaning and maintenance.
2. Before any maintenance operation, be sure to insert back the magnetic cap at the bottom of the robot to avoid injuries caused by impeller rotation!


3.1 Filter maintenance

1. Clean the filter thoroughly and regularly for a better cleaning and climbing performance. Otherwise, the cleaning and climbing performance may be affected when the filter is full or clogged.
2. Annually clean the clogged filter with mild acidic detergent, Suitable safety equipment must be worn when carrying this out


3.2 Impeller maintenance

Visually check whether the impeller or impeller shaft is entangled with hair or other debris when the robot has a reduced suction or climbing performance, clean the debris trapped in the impeller.

*** Magnetic cap MUST be inserted back before any operations on the impeller.**

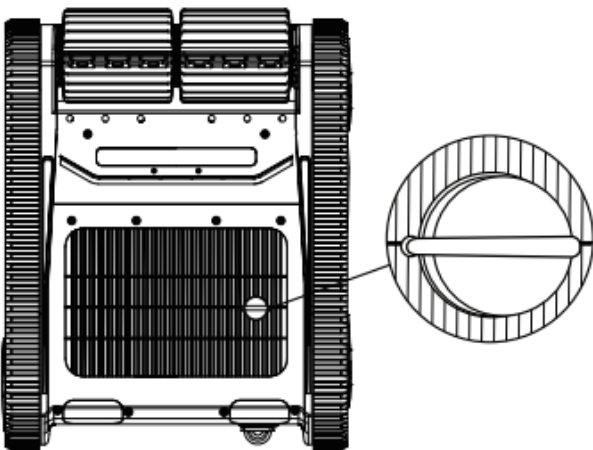

The steps are as follows:

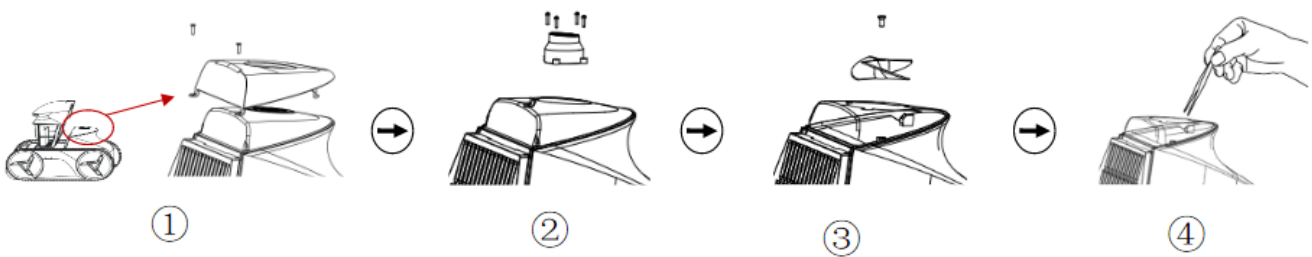


- ① Take out the filter box, remove the fixing screws of the inflow ring cover, and take out the inflow ring cover.
- ② Remove the deflector fixing screws and take out the deflector.
- ③ Remove the impeller screw, then take out the impeller. (PS: impeller edge is sharp, please wear gloves while operating.)
- ④ Clean the impeller debris and reassemble the all the parts mentioned above in order.

PS: If you have any difficulties performing impeller maintenance, please contact your dealer for assistance.

3.3 Replace the worn brushes

Remove the worn brushes & position the new brushes:

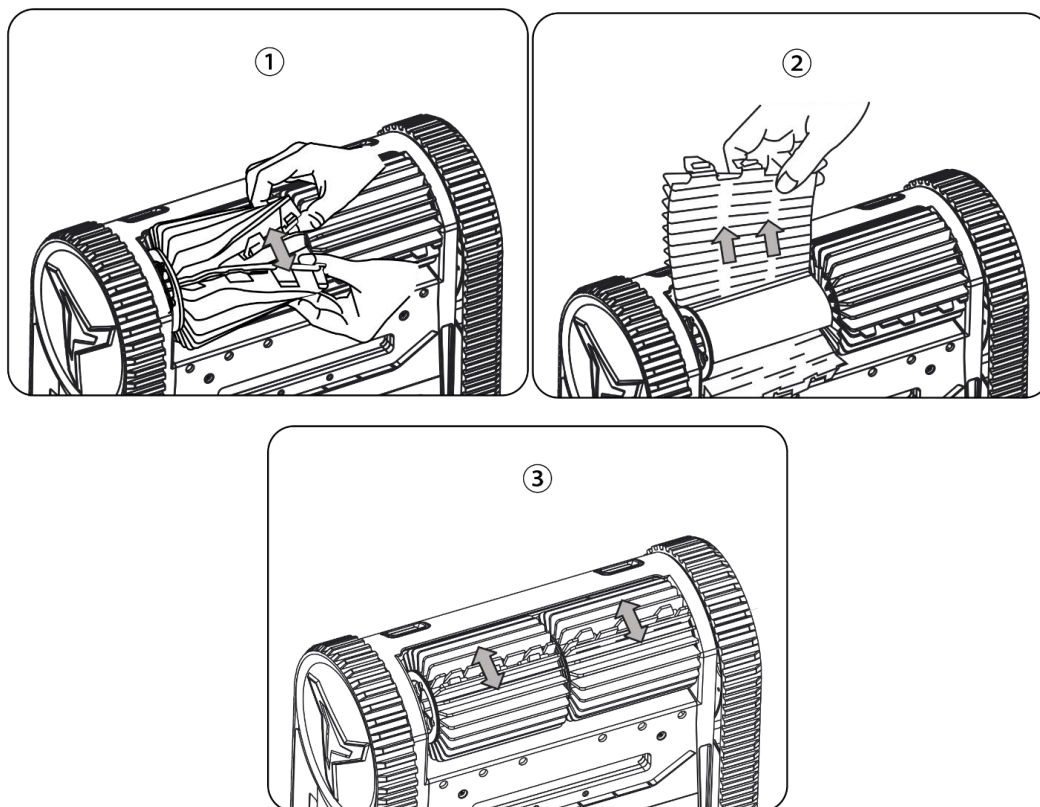


- ① Remove the tabs from the holes inside which they are fastened, then remove the brushes.



- ② Fit the side without tabs under the brush holder.
- ③ Roll the brush around its support, slide the tabs into the attachment holes and pull on the end of each tab until its edge passes through the slit.

3.4 Replace the worn tracks

Remove the worn tracks:

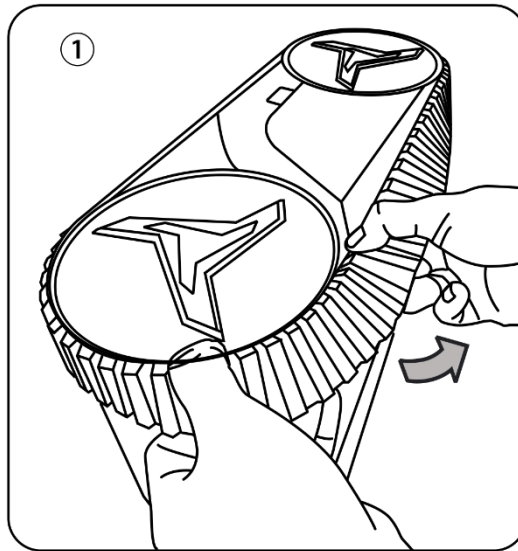

Position the new tracks:

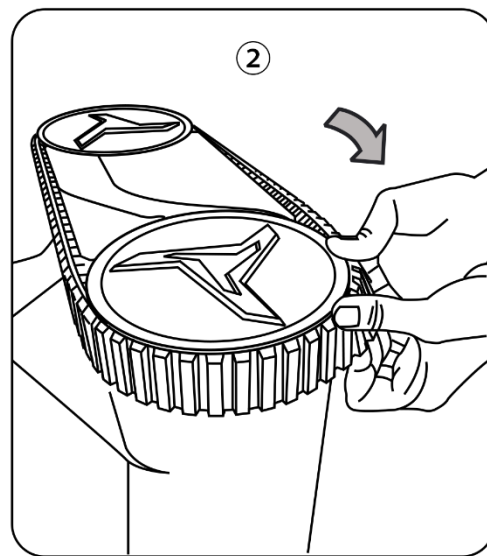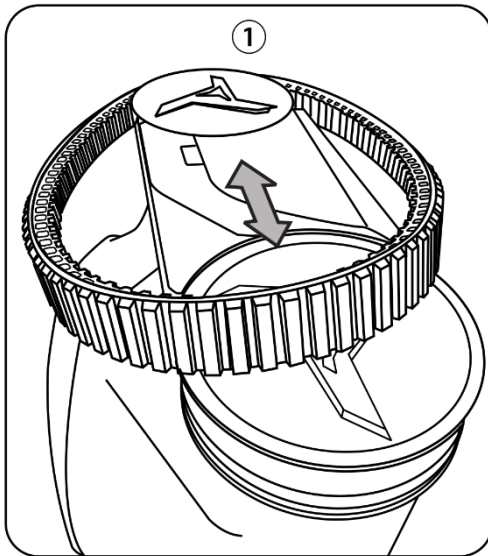




SECTION 4. TROUBLE SHOOTING

Failure	Possible reason	Solution
Charging failure	Debris on the electrode of charging head (Non-failure)	Clean debris
	The bottom Magnetic cap isn't removed (Non-failure)	Remove the Magnetic cap
	Charger is damaged	Replace charger
Switch on failure	The Magnetic cap isn't removed (Non-failure)	Remove the Magnetic cap
	Water spots on the robot display or people's hand (Non-failure)	Keep the display and hands dry, then try again
	Wrong operation (Non-failure)	Hold the power button for 3 seconds
	No power in the battery (Non-failure)	Get the robot fully charged
Not working (not moving, not pumping)	Low battery (Non-failure)	Get the robot fully charged
	Out of water (Non-failure)	Make sure the robot under water and indicator lights being on
	No pressing the on/off button after settings are done (Non-failure)	Press the on/off button after the settings are done, make sure indicator lights being on before putting the robot into water
	Full load of filter basket (Non-failure)	Clean filter basket
Moving but not pumping	The impeller gets stuck	Check whether there are too many debris in the guide ring, affecting the rotation of the impeller. (Please insert back the magnetic cap before operation, to avoid injuries caused by the impeller rotation) .
	Full load of filter basket (Non-failure)	Clean filter basket
	Water inlet is blocked(Non-failure)	Take out of filter basket and clean water inlet
	Battery low (Non-failure)	Get the robot fully charged
Pumping but not moving	The moving motor gets stuck	Please contact the dealer for replacement
	Track is deviated and stuck (Non-failure)	Turn the robot upside down and roll the track forward and backward to restore the track
	Track is damaged	Replace track
	Scrubber gets stuck (Non-failure)	Clean scrubber
	The robot gets stuck by obstacle and shut down for auto-protection (Non-failure)	Remove obstacle and restart

	Full load of filter basket (Non-failure)	Clean filter basket
Not climbing	Under floor cleaning mode (Non-failure)	Turn to overall cleaning mode
	The impeller is stuck	Check whether there are too many debris in the guide ring, affecting the rotation of the impeller. (Please insert back the magnetic cap before operation, to avoid injuries caused by the impeller rotation).
	Full load of filter basket (Non-failure)	Clean filter basket
	Water inlet is blocked (Non-failure)	Take out of filter basket and clean the water inlet
Poor cleaning capability.	Battery low (Non-failure)	Get the robot fully charged
	The impeller is stuck	Remove any debris or hair in the guide ring
	Full load of filter basket (Non-failure)	Clean filter basket
	Water inlet blocked (Non-failure)	Take out of filter basket and clean water inlet.
	Scrubber is damaged	Replace scrubber
	Filter basket is damaged	Replace filter basket
Unusual non-stop	Software failure	Insert the magnetic cap back to bottom for 5s, then remove it and restart

Note:

1. Do not use the robot when people or animals are in the pool.
2. Charger MUST BE DISCONNECTED before conducting any maintenance on the robot.
3. Contact your dealer for problems not covered in Trouble Shooting Guide.
4. Normally, the robot will stop at the poolside when it encounters any failure or when the battery level is less than 20%.
5. If an error occurs, please restart the robot
6. If the robot is malfunctioning, the error code will appear on the operation panel (see 2.1) and the  on the operation panel flashes red. Clicking the  again will remove the error warning and the robot will enter the setup mode, either for general settings or by directly pressing the  to enter the working mode.

Indoor



indoor power supply use only.

Recycling



When disposing of the product, please hand it over to a designated collection point for the recycling of waste electrical and electronic equipment.

The separate collection and recycling of waste equipment at the time of disposal will help ensure that it is recycled in a manner that protects human health and the environment.

For more information about where you can drop off your waste for recycling, please contact your local authority.